

COMPACT REMOTE TAIL SWITCHES

⚠ BATTERY INFORMATION & WARNING

Before replacing batteries, read the enclosed BATTERY INFORMATION/WARNING insert in your original packaging. For additional battery safety, handling, and product information, visit www.surefire.com/batteries.

⚠ WARNING

Use of standard batteries can cause injury or property damage. Visit www.surefire.com/batterysafety.

MAINTENANCE

Use a clean, dry cloth to wipe off body and window. Periodically clean and lubricate threads. Apply a thin coat of non-migrating, silicon-based lubricant to O-rings (do not use petroleum-based lubricants which can harm O-rings). For additional tips on maintaining your SureFire illumination tool, visit www.surefire.com/faqs-maintenance.

ACCESSORIES

SureFire makes a full line of accessories for most of its illumination tools. For a complete listing, visit www.surefire.com/partaccessories.

THE SUREFIRE NO-HASSLE GUARANTEE

We'll do what it takes to keep your SureFire gear running smoothly. SureFire warrants that if you — our customer — purchase one of our products, and we determine that it is defective in material and/or workmanship during your lifetime, we will repair or replace it — no hassle!

Our warranty does not cover consumables or normal wear-and-tear — things like batteries draining, headbands and headpads wearing out, ink cartridges running out, and switches wearing out — or damage resulting from abuse, alterations, unauthorized repairs, or use contrary to SureFire's user manuals.

Should you need a replacement product, SureFire reserves the right to replace an obsolete product with a current production, like model. In the event that any issue with a SureFire product is not covered under this warranty SureFire can arrange to have the product repaired for a reasonable fee.

STANDARD DISCLAIMER

Except as specified above or prohibited by applicable law: all express or implied conditions and warranties, including, without limitation, any implied warranty or condition of merchantability or fitness for a particular purpose, or accuracy of any informational content, are hereby excluded and disclaimed by SureFire; and in no event will SureFire be liable for any special, direct, indirect, consequential, incidental or punitive damages howsoever arising and regardless of the theory of liability, even if advised of the possibility of such damages. Products, prices, availability, specifications, and offers are subject to change or cancellation at any time without notice.

WARRANTY CLAIMS

 
For claims, contact Customer Service at 714-545-9444 to obtain a Return Merchandise Authorization number (RMA#). Then package the unit carefully and send to (no CODs):

SureFire, LLC.
Repairs Department, RMA# _____
17680 Newhope Street, Suite B
Fountain Valley, CA 92708


SureFire will pay any reasonable shipping costs to return the unit to you.

SUREFIRE

COMPACT REMOTE TAIL SWITCHES

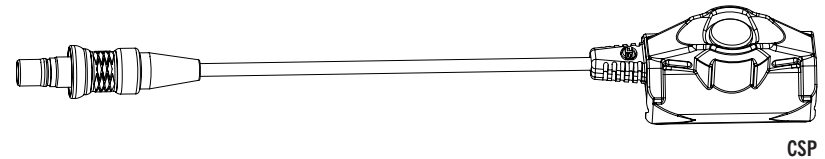

CSP

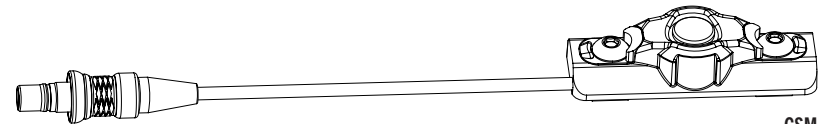 

CSM

SUREFIRE

18300 MT. BALDY CIRCLE,
FOUNTAIN VALLEY, CA 92708-6122
SUREFIRE.COM

Revision A 2-2023
71-01-1148



USER MANUAL

COMPACT REMOTE TAIL SWITCHES

⚠ WARNING

ALWAYS confirm weapon is unloaded and on SAFE before attempting installation.

SWITCH OPERATION

CSP

Press button for momentary activation; click through for constant-on activation.

CSM

Press button for momentary activation; click through for constant-on activation.

SWITCH MOUNTING

CSP

(Fig 1) While tilting, engage one leg of the CSP switch with the Picatinny rail edge, align keying feature with the desired cross slot on your weapon's picatinny rail. Rotate CSP until the other leg fully engages. Insert the switch terminal into the tailcap receptacle until there is an audible click. To remove, twist the switch terminal slightly while pulling it from the switch receptacle (avoid pulling by the switch cable).

NOTE: The CSP provides two slots for optional use of tie wraps (not included) for added mounting security.

CSM

(Fig 2) Adjust gap between the M-LOK® T-Nuts and the CSM to match the thickness of the mounting surface. Align the T-Nuts with the slot and insert in the desired location. An initial ¼ to ½ turn of the screw for each T-Nut rotates the nut into engagement. Tighten normally (pulling slightly up on the switch can assist in keeping the t-nuts in the optimal position). Insert the switch terminal into the tailcap receptacle until there is an audible click. To remove, twist the switch terminal slightly while pulling it from the switch receptacle (avoid pulling by the switch cable).

TAILCAP OPERATION

NOTE: Tailcap switch and remote switches operate in parallel. (Leaving the tailcap switch on and cycling the remote switch will not deactivate the light and vice-versa.)

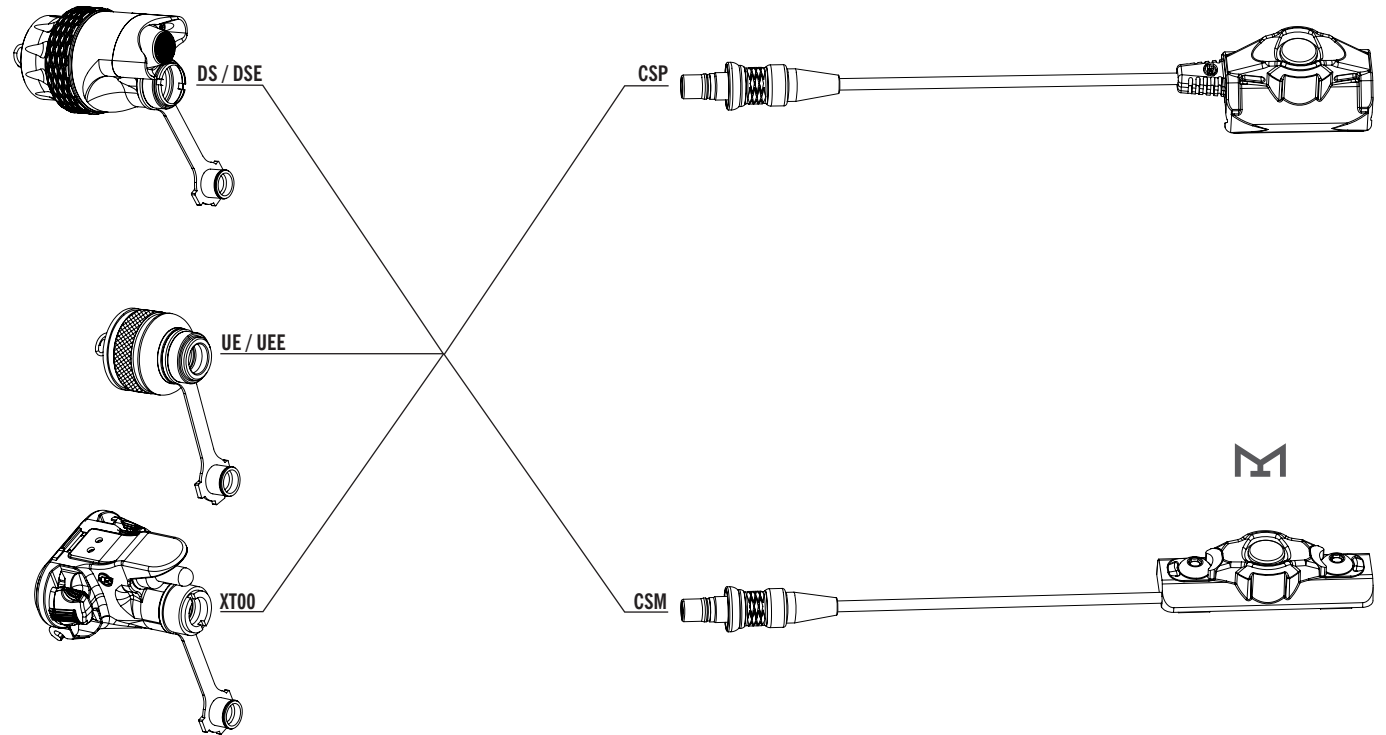 


FIGURE 1

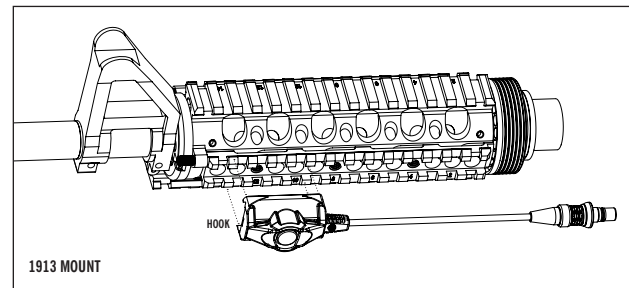 


FIGURE 2

